
HOW TO SET THE THERMOSTATIC HEAD

-) PUSH UP THE WHITE RING WITH TEARDROP SYMBOLS ON 1 CLICK AWAY FROM THE CHROME NUT.
- 2) TURN THE TEARDROP RING UNTIL IT IS SET AT THE FULLY GREY TEARDROP.
- 3) RETURN THE TEARDROP TO ORIGINAL POSITION
-) TURN THE TEMPERATURE PART WITH TEMPS ON TO 55C FOR SCREEDED FLOOR OR 65C FOR A JOISTED FLOOR.
- 5) ONCE SET PUSH THE TEARDROP RING 2 CLICKS AWAY FROM THE CHROME NUT TO LOCK IN PLACE.

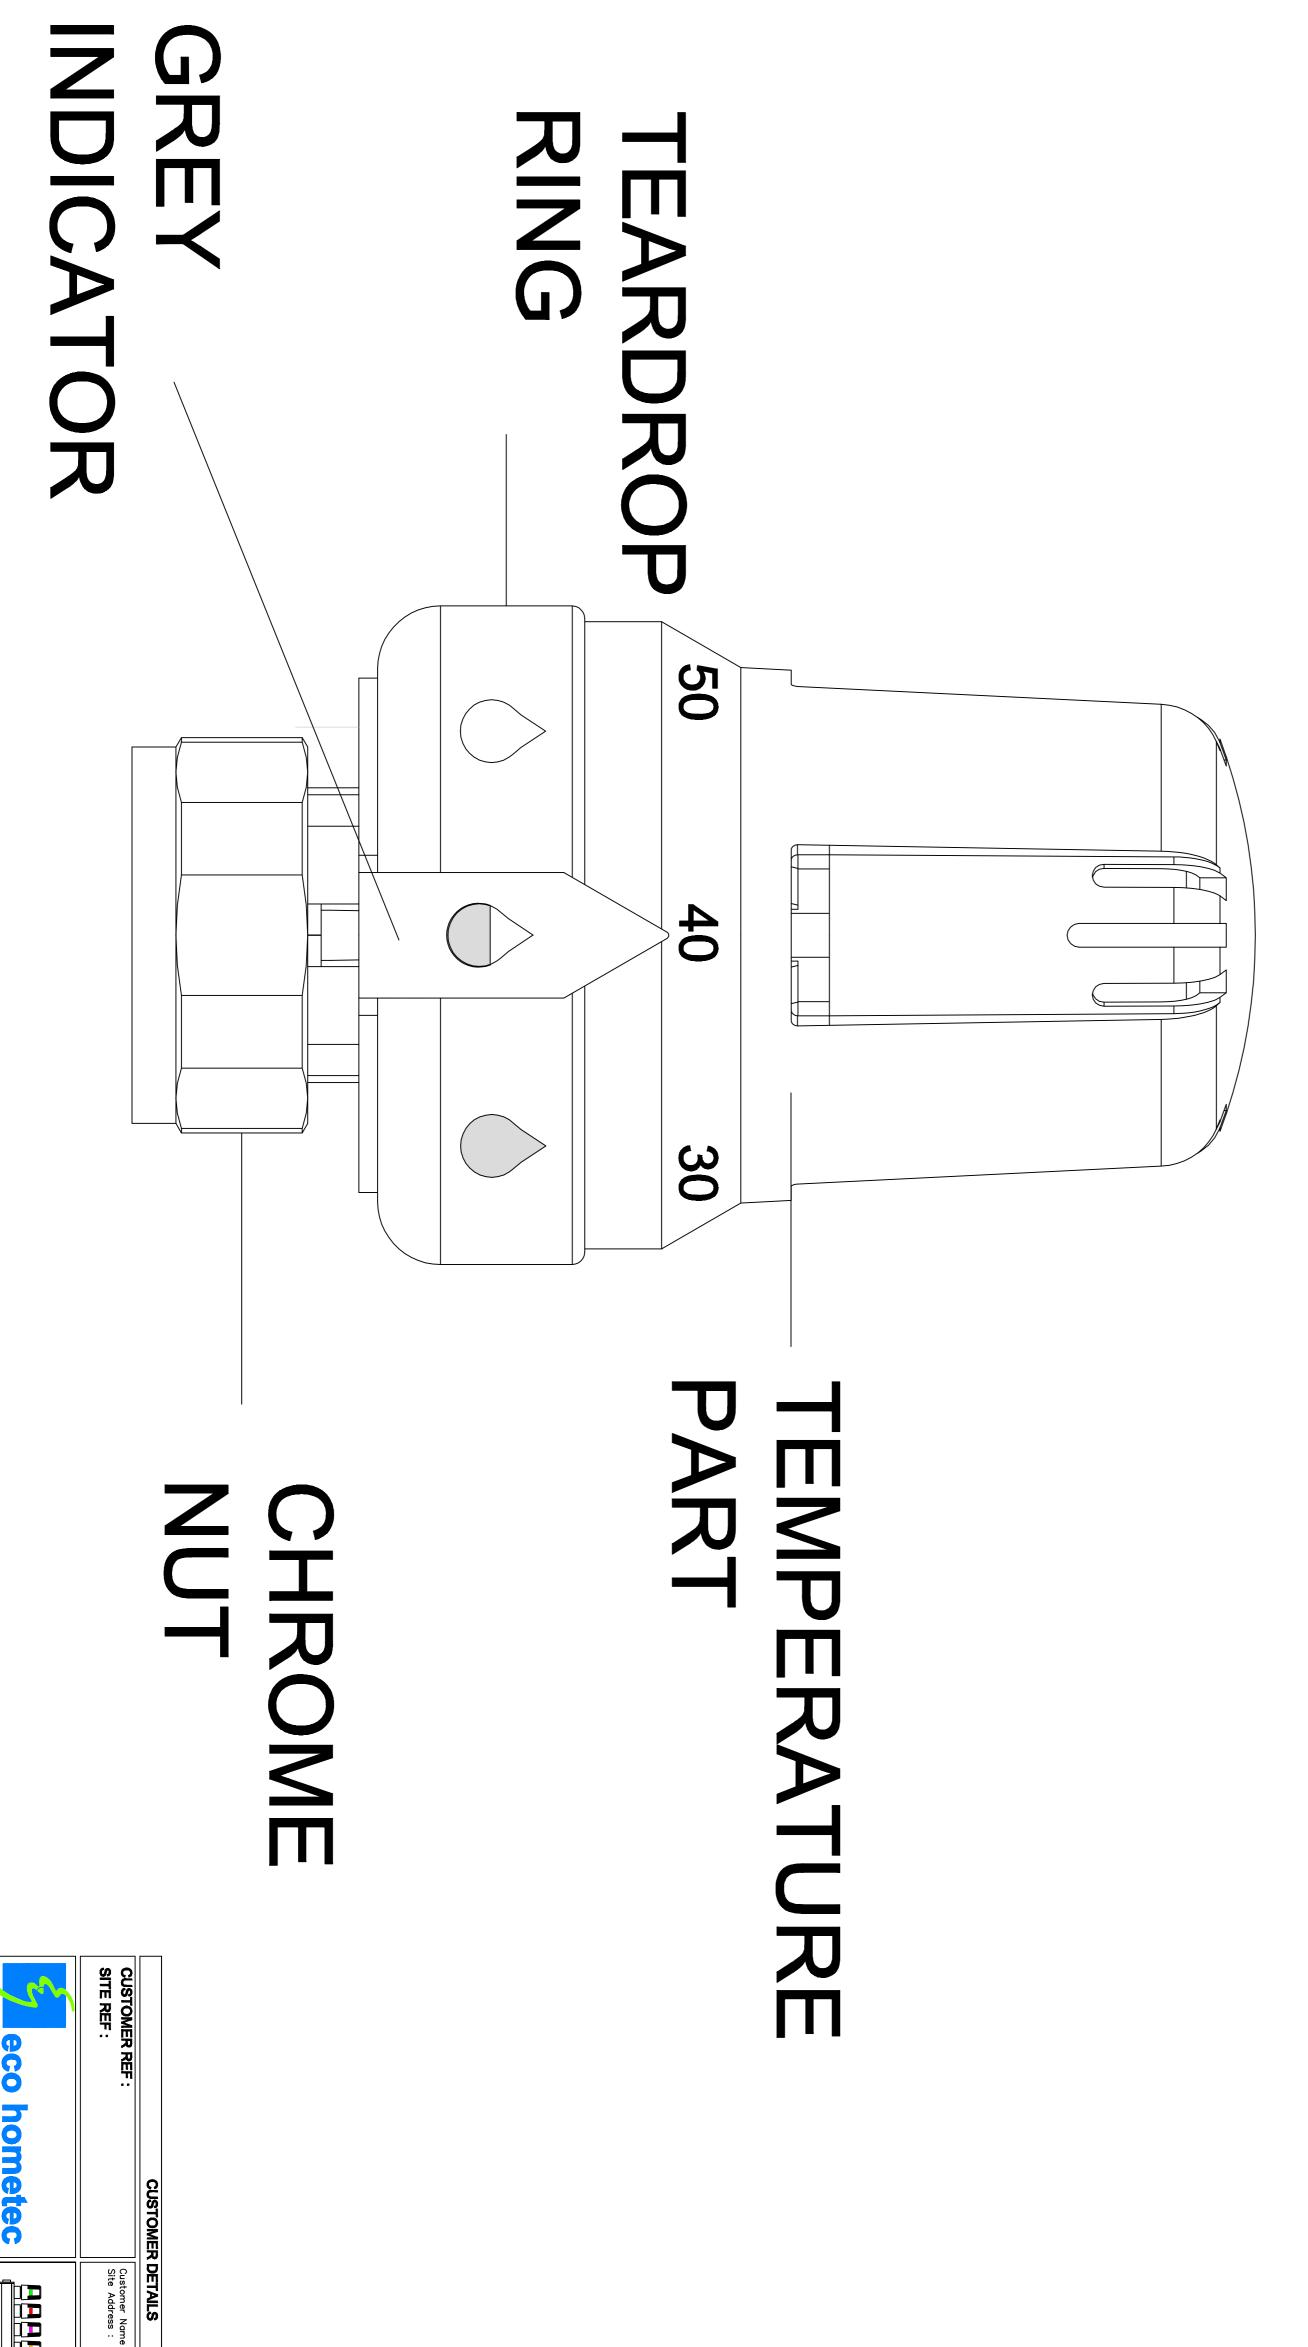

Where either drilling or notching of joists or brickwork is required; this work should be undertaken by the builder on site in accordance with the CAD drawing and architectural calculations or that feeling of comfort

on harder (at) H.

Unit 10.

Chronic Enterprise Park

Chronic Enterp hometec Customer Name : Site Address : Scale:
N.T.S REVISION